


4" Skyline (SL) Series Shown:

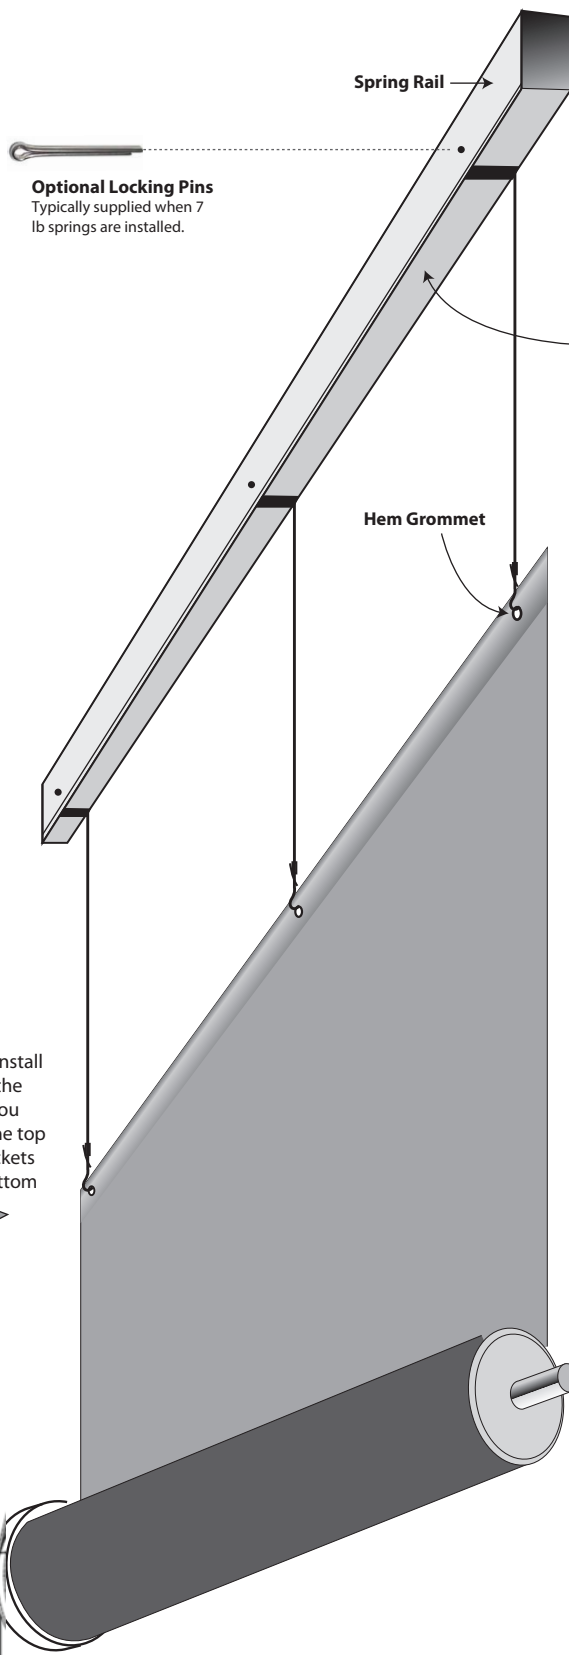

Optional Locking Pins
Typically supplied when 7 lb springs are installed.

Spring Rail

3 Mount the spring rail. First remove the cover cap to gain access to the inside. You can easily drill down however if you have to install "back" then you would need to drill 3/8" pilot holes through the front face and run screws through the back face. 3/8" color keyed hole plugs are provided for OB installations.

4 **Spring Rail Cover Cap**

After you have powered up the motor you can then run the shade up so that it's within working distance of the tension cording.

5

Each spring will have a colored leader cord that you will pull out from the tension rail. Once you have pulled enough cording that you are comfortable working with insert the supplied pin into the holes to temporarily lock springs. Then cut the colored leader cording off and discard. Also cut off the loop and crimp at the end of the white tension cord so you are just left with a bare cord edge. Feed the cord through the back side of the shade hem grommet. Perform a lasso style knot (see separate document for specific instructions on how to perform this knot).

Once the tension cord is tied off you can then carefully tug slightly on the tension cord to relieve pressure and remove the locking pins (if locking pins were provided).

Knots are used rather than mechanical fasteners to alleviate any marks or impressions onto the fabric panel.

2

Insert the shade into the brackets. Its easiest to install the idler pin into its bracket first and then insert the motor end however you may also invert these directions if the shade is too tight of a fit within the brackets (insert motor first and then depress the idler plunger pin in with a flat head screw driver and then align the pin with the hole of the bracket, slide the screw driver out until the pin deploys and engages).



6 To snap on the fascia first you must install the fascia clips (if 4" SL model) onto the brackets. See below pictures. Then you can snap on the fascia by hooking the top of the fascia onto the top of the brackets and then forcefully snapping the bottom into place.

Fascia Panel

Fascia Clips

End Caps
(Std for OB Mount)

Fascia Clips


End Caps
(Std for OB Mount)

1


First Mount the left and right fascia brackets to the wall, jamb or ceiling (the brackets are universal).

****See separate instructions for pairing/programming motors!**


Lasso Knot Instructions for Bottom-Up Flex Hem Bar Shades

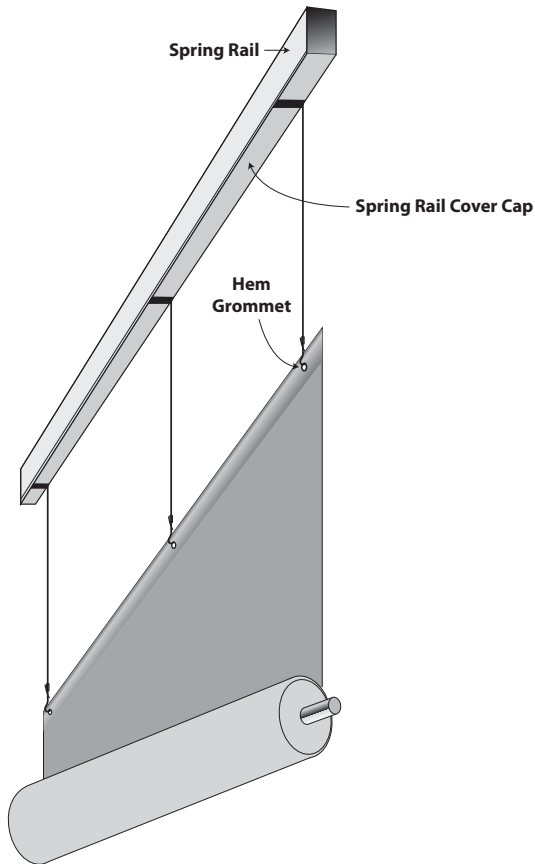


1
Feed the tension cord through the back side of the shade as shown:

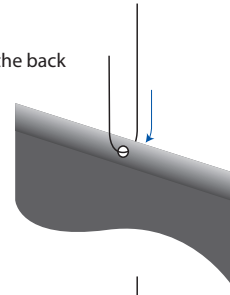

2
Loop the tension cord creating a backwards "P" with the bottom of the loop going under the leg of the "P" as well as the cord behind the fabric.

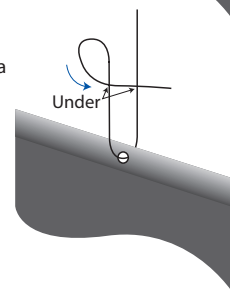

3
Loop the tension cord around the cord that is behind the fabric and through the "P" to create the knot as shown:

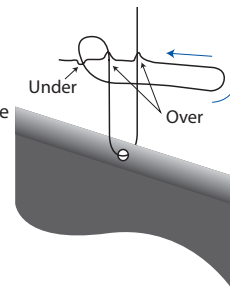

4
Finally pull the cord to tighten the knot. Its not recommended to cut off excess cord beyond the knot. This excess helps to keep the knot secure.

5
Once the tension cord is tied off you can then carefully tug slightly on the tension cord to relieve pressure and remove the locking pins.

Knots are used rather than mechanical fasteners to alleviate any marks or impressions onto the fabric panel.